

<p>DREDDYCLINIC.COM</p> <p>Integrated Medical Clinic & Ayurveda School</p> <p>227/124 Banwangtan, Mooban Wang Tan 5, Soi 3, T. Sanpakwan, A. Hang Dong, Chiang Mai 50230, Thailand</p> <p>Mobile. (+66) 9-8505066 Phone. (+66)-53-436284 Fax. (+66)-53-436284</p> <p>Email: info@dreddyclinic.com Web Site: www.dreddyclinic.com</p>	FOR OFFICE USE ONLY
	DATE RECEIVED
	DEPOSIT AMOUNT:

INSTRUCTION MANUAL

OZZON

OZONATED WATER MAKER



MODEL : OZ-553

Integrated Medical Clinic & Ayurveda School
227/124 Banwangtan, Mooban Wang Tan 5, Soi 3, T. Sanpakwan, A. Hang Dong,
Chiang Mai 50230, Thailand

Mobile. (+66) 9-8505066
Phone. (+66)-53-436284
Fax. (+66)-53-436284
Email: info@dreddyclinic.com
Web Site: www.dreddyclinic.com

OZONE (O₃) The wonderful thing from the nature, Normally oxygen has 2 atoms but ozone is the oxygen which has 3 atoms and this ozone has many benefits.

Benefit in Beauty

Cleaning the face with ozonated water, is the way to clarify the face from the dirt, harmful chemicals and can add the oxygen to the face skin. So ozone can clean and clear the face, be healthy and reduce the appearance efficiency.

Benefit in disinfection

Ozone can eliminate germs, viruses, bacteria and add the oxygen to the skin. So any painful skin can be clear and healthy.

Benefit in Toxic clear for fresh vegetable and meats

Cleaning the fresh vegetables and meats with ozonated water, can eliminate the germs, harmful chemicals or formalin and the oxygen from ozone can make the vegetables or meats more fresh.



Ayurveda Asia Co., Ltd.

Phone : (+66)-53-436284, Fax : (+66)-53-436284, Mobile : 09-8505066


Website : www.dreddyclinic.com Email : info@dreddyclinic.com

Integrated Medical Clinic & Ayurveda School

227/124 Banwangtan, Mooban Wang Tan 5, Soi 3, T. Sanpakwan, A. Hang Dong,
Chiang Mai 50230, Thailand

Mobile. (+66) 9-8505066
Phone. (+66)-53-436284
Fax. (+66)-53-436284
Email: info@dreddyclinic.com
Web Site: www.dreddyclinic.com

Unit Component

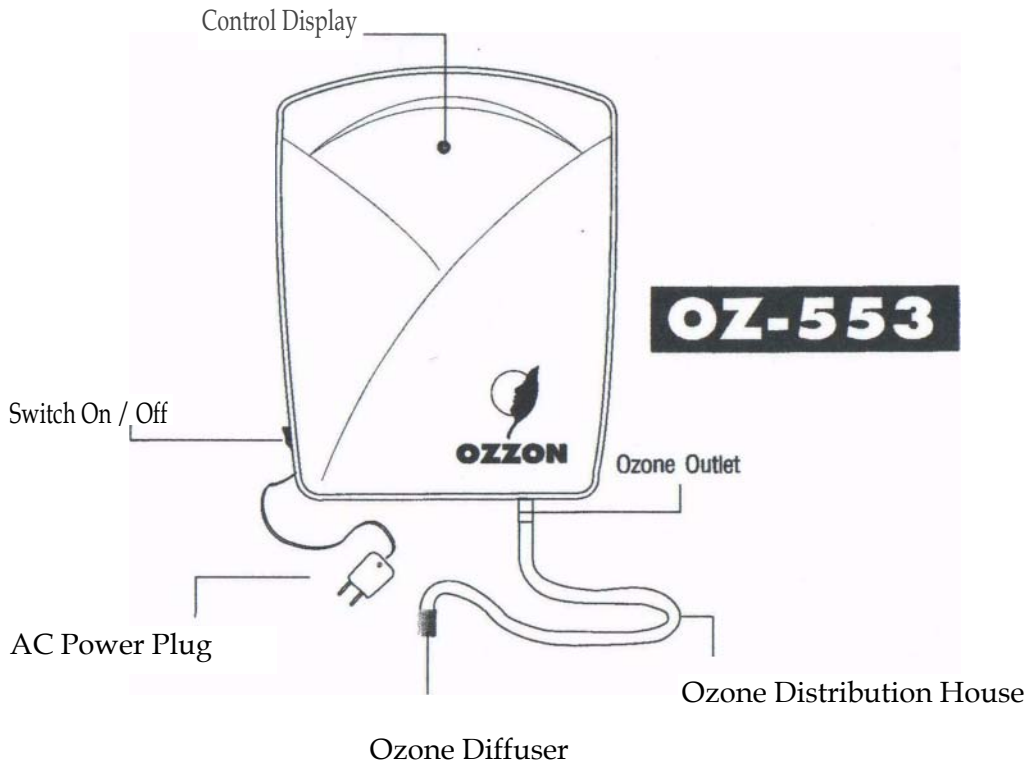

Ayurveda Asia Co., Ltd.

Phone : (+66)-53-436284, Fax : (+66)-53-436284, Mobile : 09-8505066

Website : www.dreddyclinic.com Email : info@dreddyclinic.com


Installation Instructions

1. The unit should be installed in ventilate area and should not be installed face to sun shine directly place.
2. The unit should be installed above the working area.
3. The unit should be installed higher reach from children.

Integrated Medical Clinic & Ayurveda School

227/124 Banwangtan, Mooban Wang Tan 5, Soi 3, T. Sanpakwan, A. Hang Dong,
Chiang Mai 50230, Thailand

Mobile. (+66) 9-8505066
Phone. (+66)-53-436284
Fax. (+66)-53-436284
Email: info@dreddyclinic.com
Web Site: www.dreddyclinic.com

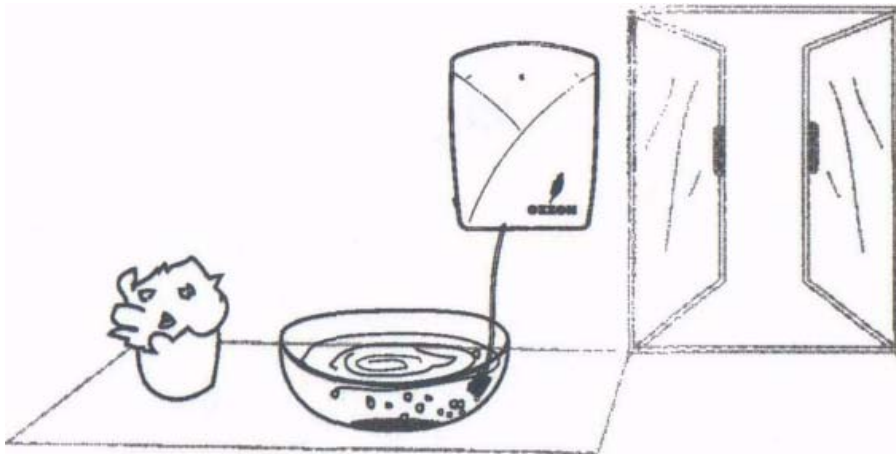

Operating Instructions

1. Plug power line into AC outlet.
2. Connect the ozone distribution nose to the ozone outlet
3. Fill the water into the plastic bowl.
4. Put the diffuser into the water.
5. On the switch, the lamp will be bright and will occur the bubbles in the water.
6. Put the thing into the water.



Ayurveda Asia

Ayurveda Asia Co., Ltd.

Phone : (+66)-53-436284, Fax : (+66)-53-436284, Mobile : 09-8505066

Website : www.dreddyclinic.com Email : info@dreddyclinic.com

Cleaning the face

1. Rill the water into the plastic bowl.
2. Put the diffuser into the water.
3. On the switch and operate at least 10 min.
4. Off the switch and bring the ozone diffuser out from the water.
5. Close up your eyes and stop your breath, then put your face into the water.

Integrated Medical Clinic & Ayurveda School

227/124 Banwangtan, Mooban Wang Tan 5, Soi 3, T. Sanpakwan, A. Hang Dong,
Chiang Mai 50230, Thailand

Mobile. (+66) 9-8505066
Phone. (+66)-53-436284
Fax. (+66)-53-436284
Email: info@dreddyclinic.com
Web Site: www.dreddyclinic.com

6. Keep your face in the water long as you can and catch the breath, then put your face into the water again. Do like this around 2 min.
7. Make your face dry by clean cloth.
8. Should do twice a day (morning and evening) after take a bath.

Note : Should use the normal temperature water. Don't use the warm water.



Ayurveda Asia Co., Ltd.

Phone : (+66)-53-436284, Fax : (+66)-53-436284, Mobile : 09-8505066

Website : www.dreddyclinic.com Email : info@dreddyclinic.com

Take a bath

1. Fill the water into the plastic bowl.
2. Put the diffuser into the water and on the switch.
3. Keep it operate around 10 min. In the mean time, take a bath with the normal water.
4. Off the switch and bring the diffuser out from the water.
5. After that take a bath slowly by ozonated water.

Integrated Medical Clinic & Ayurveda School

227/124 Banwangtan, Mooban Wang Tan 5, Soi 3, T. Sanpakwan, A. Hang Dong,
Chiang Mai 50230, Thailand

Mobile. (+66) 9-8505066
Phone. (+66)-53-436284
Fax. (+66)-53-436284
Email: info@dreddyclinic.com
Web Site: www.dreddyclinic.com

Note : Should use the normal temperature water. Don't use the warm water.



Ayurveda Asia Co., Ltd.

Phone : (+66)-53-436284, Fax : (+66)-53-436284, Mobile : 09-8505066

Website : www.dreddyclinic.com Email : info@dreddyclinic.com


Integrated Medical Clinic & Ayurveda School

227/124 Banwangtan, Mooban Wang Tan 5, Soi 3, T. Sanpakwan, A. Hang Dong,
Chiang Mai 50230, Thailand

Mobile. (+66) 9-8505066
Phone. (+66)-53-436284
Fax. (+66)-53-436284
Email: info@dreddyclinic.com
Web Site: www.dreddyclinic.com


Cleaning the painful skin

1. Fill the water in the plastic bowl.
2. Put the diffuser into the water.
3. On the switch, will occur the bubble and keep it operate around 15 min.
4. Put the painful skin into the ozonated water around 5-10 min.
5. Dry it with the clean cloth.

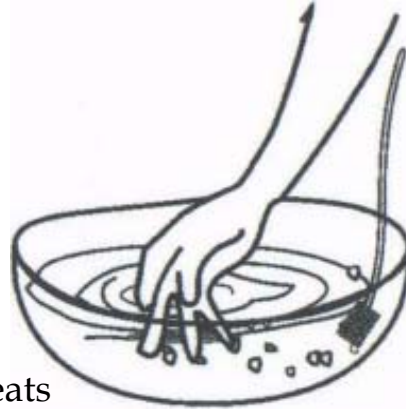

Cleaning the fresh vegetables and meats

1. Cleaning the fresh vegetable and meats by the clean water.
2. Fill the water into the plastic bowl.
3. Put the diffuser into the water.
4. On the switch, will occur the fine bubble.
5. Put the vegetables and meats into the ozonated water around 10-15 min.
6. Take the vegetables or meats out for cooking and not necessary to wash it again

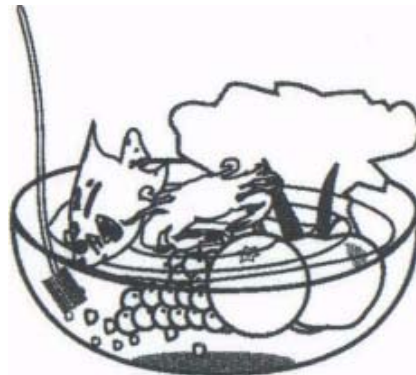

Ayurveda Asia Co., Ltd.

Phone : (+66)-53-436284, Fax : (+66)-53-436284, Mobile : 09-8505066

Website : www.dreddyclinic.com Email : info@dreddyclinic.com

Integrated Medical Clinic & Ayurveda School

227/124 Banwangtan, Mooban Wang Tan 5, Soi 3, T. Sanpakwan, A. Hang Dong,
Chiang Mai 50230, Thailand

Mobile. (+66) 9-8505066
Phone. (+66)-53-436284
Fax. (+66)-53-436284
Email: info@dreddyclinic.com
Web Site: www.dreddyclinic.com

Technical Specification

OZZON OZ-553

Ozone Capacity	: 300 mg/hr
Power Supply	: 220 Vac,50 Hz.
Power Consumption	: 18 walt
Sizing	: 192 x 246 x 95 mm. (W x H x D)
Weight	: 1.9 Kg

Warning

1. Do not directly inhale ozone at ozone outlet.
2. Do not turn on the unit while the ozone outlet is obstructed or the distribution hose is bent.
3. Do not position the unit lower than the level of working area when use with water.
4. Do not place the unit close to flammable material.

Note : If the unit still can not operate, do not disassemble the unit by yourself.
Kindly contact the service center as shown in the warranty card.



Ayurveda Asia Co., Ltd.

Phone : (+66)-53-436284, Fax : (+66)-53-436284, Mobile : 09-8505066

Website : www.dreddyclinic.com Email : info@dreddyclinic.com

Integrated Medical Clinic & Ayurveda School

227/124 Banwangtan, Mooban Wang Tan 5, Soi 3, T. Sanpakwan, A. Hang Dong,
Chiang Mai 50230, Thailand

Mobile. (+66) 9-8505066
Phone. (+66)-53-436284
Fax. (+66)-53-436284
Email: info@dreddyclinic.com
Web Site: www.dreddyclinic.com

Ozone with water: connect pipe to provide Ozone and Diffuser to dip in water

Kind of working	Clear capacity	Time (min.)	Introduction
wash vegetable, fruit	germ, insecticide, toxic	15-30	To day. Plastic seal to
wash squid - shrimp	germ, formalin	10-15	wash at least 2 limes
lemon	germ, toxic	60	today, Plastic seal to
wash pork, fish, chicken	toxic, germ	10-15	wash at least 2 times
ship vean sprouts	toxic, germ	10-15	to dry, plastic seal to
stop cloth last water	chemical cloth wash, germ	30	continue protection
stop women dress last water	chemical doth wash, germ	30	continue protection
wash cup / bowl	chemical plate wash, germ	20	Washed to dry
to rinse the mouth / to thrush one's teeth	germ, bacteria, bad smell of mouth	10	to rinse the mouth with 1 liter ozone water
wash hand	germ, bacteria	15	stop after wash
wash face	germ, bacteria	30	final wash
to take a shower	germ, bacteria	30	final shower
wash loot / stop foot	bad smell, germ	30	stop on Ozone water
wash hair	fungi, bad smell, chemical	30	final wash hair
aquarium	germ, bad smell	10-20	size of aquarium
losing sweat	bacteria, reduce to irritate	30	stop body
stop fruit for sale	reduce to bacteria, germ	30	To dry. Plastic seal
Ozone oHve oil	midical treatment, skin	30	to refrigerator
drink water	pasteurize water	15-60	pass to filter before
stop Chronic wound	bacteria, germ	5-10	step everyday



Ayurveda Asia Co., Ltd.

Phone : (+66)-53-436284, Fax : (+66)-53-436284, Mobile : 09-8505066

Website : www.dreddyclinic.com Email : info@dreddyclinic.com

Integrated Medical Clinic & Ayurveda School

227/124 Banwangtan, Mooban Wang Tan 5, Soi 3, T. Sanpakwan, A. Hang Dong,
Chiang Mai 50230, Thailand

Mobile. (+66) 9-8505066

Phone. (+66)-53-436284

Fax. (+66)-53-436284

Email: info@dreddyclinic.com

Web Site: www.dreddyclinic.com

INSTRUCTION MANUAL

OZZON

OZONATED WATER MAKER MODEL : OZ-553



Related sites:

[Ayurvedic Cure](#)

[Ozone Oxygen Therapy](#)

[Disease & Conditions](#)

[Colon Hydrotherapy](#)

[Diet Programs](#)

Integrated Medical Clinic & Ayurveda School

227/124 Banwangtan, Mooban Wang Tan 5, Soi 3, T. Sanpakwan, A. Hang Dong,
Chiang Mai 50230, Thailand

Mobile. (+66) 9-8505066

Phone. (+66)-53-436284

Fax. (+66)-53-436284

Email: info@dreddyclinic.com

Web Site: www.dreddyclinic.com

[Education Programs](#)
[Parasites Programs](#)
[Detoxification Program](#)
[Liver Cleansing](#)
[Kidney Cleansing](#)
[Health Tours Program](#)
[Mercury Detoxification](#)
[Weight Loss Program](#)
[Vitamins](#)

Integrated Medical Clinic & Ayurveda School

227/124 Banwangtan, Mooban Wang Tan 5, Soi 3, T. Sanpakwan, A. Hang Dong,
Chiang Mai 50230, Thailand

Mobile. (+66) 9-8505066
Phone. (+66)-53-436284
Fax. (+66)-53-436284
Email: info@dreddyclinic.com
Web Site: www.dreddyclinic.com